


TRANSITION FROM SHINGLE ROOF TO UPPER MEMBRANE ROOF - ISO VIEW

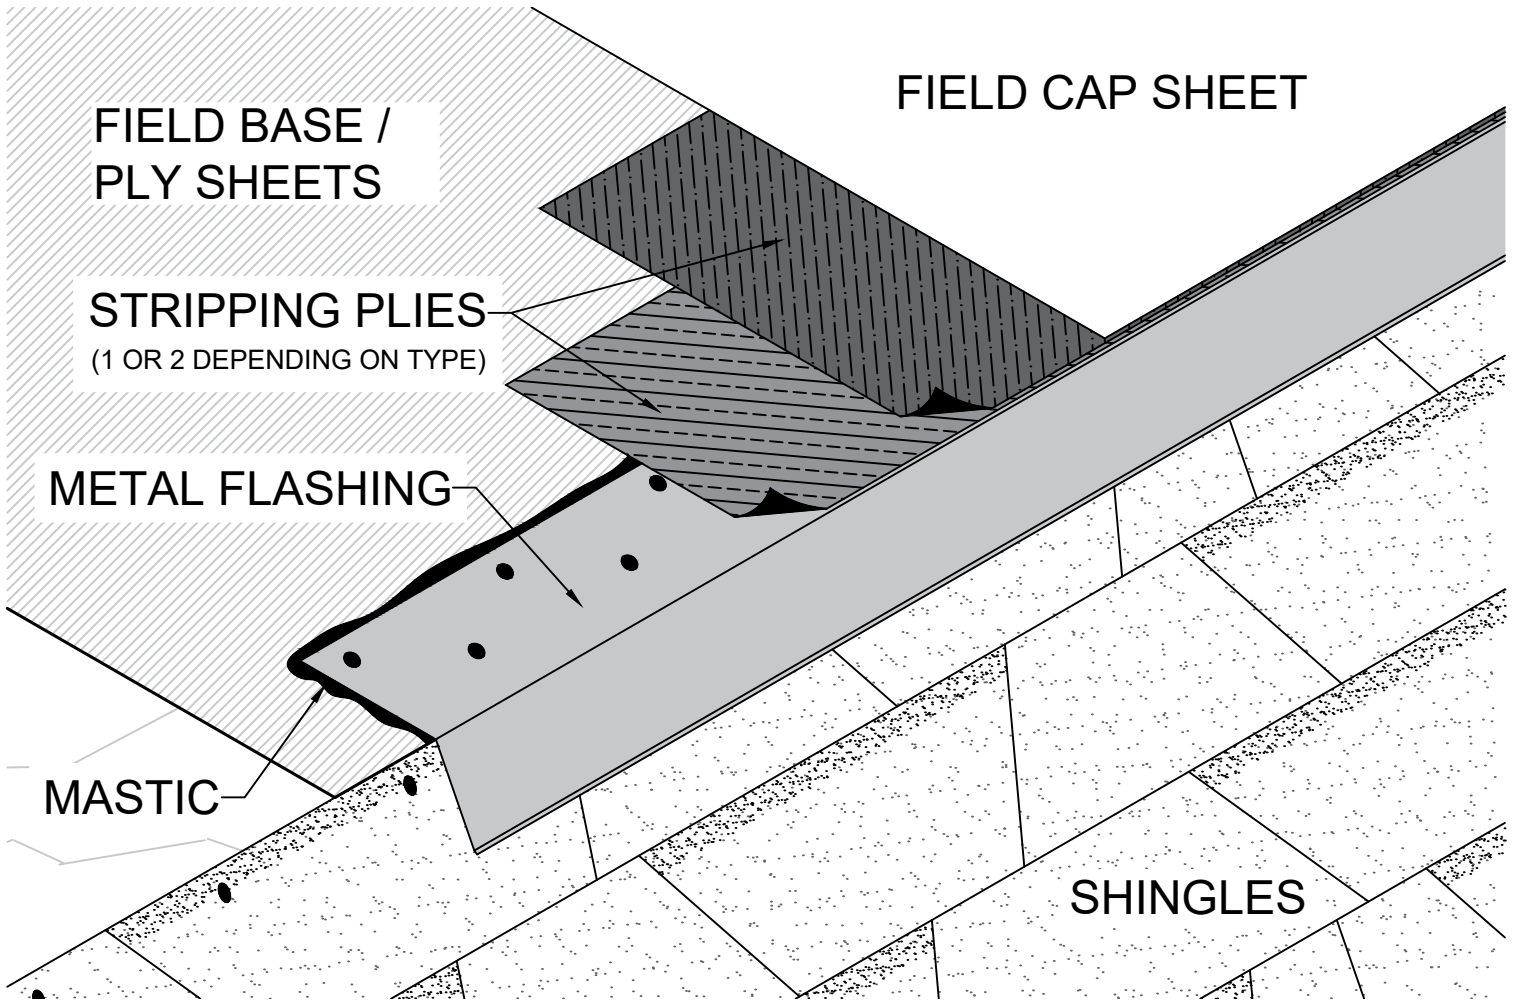

NOTES:

1. SET TOP FLANGE OF METAL FLASHING IN MASTIC.
2. SECURE TOP FLANGE WITH ROOFING NAILS, STAGGERED IN 2 ROWS, 6" (152 mm) O.C.
3. CLEAN AND PRIME METAL.
4. ADHERE STRIPPING PLY(S) OVER METAL FLASHING FLANGE.
5. INSTALL FIELD CAP SHEET.
6. SCOTCHGARD™ AND AR WARRANTIES ARE VOIDED WITH THIS CONDITION.

LOW SLOPE 11 - ISO

	PROJECT NAME:	DATE:
	ADDRESS:	SCALE: NOT TO SCALE
	OWNER:	PROJECT NO:
		DRAWING NO. :
Rev. 6/21		SUBMITTAL NO. :