
3-TAB LAYOUT PATTERN

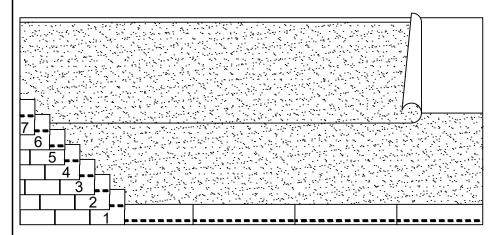

STEP 1


COURSES 1-7

1: 39-3/8" LONG 2: 33-3/4" LONG 3: 28-1/8" LONG 4: 22-1/2" LONG 5: 16-7/8" LONG

6: 11-1/4" LONG

7: 5-5/8" LONG

*ALWAYS BUTT FACTORY EDGE TO FACTORY EDGE WHEN INSTALLING THE STAIRSTEP METHOD. THIS HELPS MAINTAIN A STRAIGHT LAYOUT OF THE REMAINING SHINGLES.

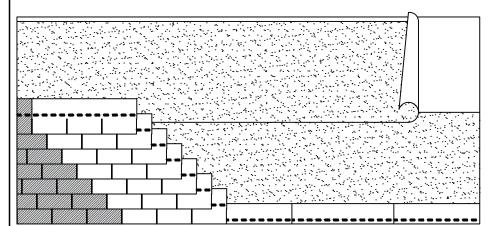


STEP 2

COURSES 1-7

*APPLY A FULL SHINGLE ADJACENT TO EACH OF THE FIRST SEVEN COURSES TO EXTEND THE PATTERN.

*ALWAYS BUTT FACTORY EDGE TO FACTORY EDGE WHEN INSTALLING THE STAIRSTEP METHOD. THIS HELPS MAINTAIN A STRAIGHT LAYOUT OF THE REMAINING SHINGLES.

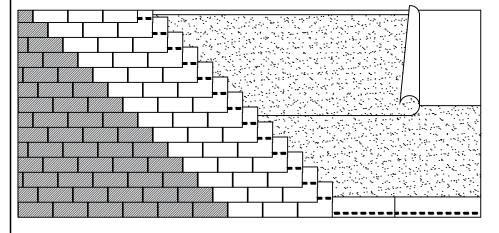

STEP 3

REMAINING COURSES

*REPEAT THE PROCESS AT COURSE 8 BEGINNING WITH A FULL SHINGLE AND CONTINUE SUCCEEDING COURSES ON UP THE ROOF.

*ALWAYS BUTT FACTORY EDGE TO FACTORY EDGE WHEN INSTALLING THE STAIRSTEP METHOD. THIS HELPS MAINTAIN A STRAIGHT LAYOUT OF THE REMAINING SHINGLES.

STEEP SLOPE 8

DATE:

	PROJECT NAME:	DATE:
Malarkey Roofing Products® Defining Excellence.™		SCALE: NOT TO SCALE
		PROJECT NO:
	ADDRESS:	DRAWING NO. :
Rev. 7/20	OWNER:	SUBMITTAL NO. :